

Vauxhall 30 - 98

Factory Drawings

B

B358	$\frac{3}{8}$ "x 2 $\frac{1}{8}$ " BSF Bolt
B393	Check Plate
B417	Door Handle
B446	Side Curtain Socket
B455	Slam Plate RHS
B456	Slam Plate LHS
B472	Washer
B590	Tray for Spare Wheel
B718	Gearbox - Front End Cover
B778	Footbrake Camshaft Bush
B779	Tappet Cover LH
B876	HT Wire Pad
B948	Compression Cock Body
B949	Compression Cock Spindle
B950	Compression Cock - Handle
B953	Temperature Regulator Body
B954	Pipe Flange
B965	Collar
B966	Spring for Ventilator
B967	Knob for Ventilator
B968	Bearing for Operating Rod
B969	Ventilator Rod - Universal Joint
B982	Water Pump "Claw" Spanner

B983

?

B992

Syphon Thermostat 98K

B993

Valve Actuating Rod

B996

Thermostat - Plug for Heat Regulator

C

C127

Cover for Starter Spring

C182

Handbrake Camshaft Lever

C306

Ball Handle

C314

Stool for Extracting Valve

C368

Clutch Cross - Shaft

C369

Drain Plug Flange

C370

Petrol Tank Filler Seating

C421

Radiator Badge

C442

Packing Plate for Shock Absorber

C443

Head (Petrol Filler)

C456

Torque Stay Clip (Rear)

C457

Torque Tube Stay

C459

Worm Wheel Shaft Packing Washer

C463

Rivet for Luggage Carrier Support

C482

Cylinder Head Nut for B652

C500

Front Parkers ?

C502

Reverse Gate Stop Rod for E361

C673

Rear Sliding Joint Pin

C749

Reverse Pinion

C757 Rear Spring Bolt
 C773 Magneto Bracket
 C793 Tappet Cover RH
 C929 Windscreen Bracket (Nearside)
 C930 Windscreen Bracket (Offside)
D
 D59 Dashboard
 D64 Housing for Bonnet Ventilator
 D77 Housing for Magneto Drive
 D83 ?
 D84 ?
 D101 Tool Box and Tray
 D104 Rear Spring
 D105 Spare Wheel Carrier Tube
 D106 Spare Wheel Carrier Support Tube
 D108 Stepboard Valance (Offside)
 D115 CAV Self Starter Type ZBB
 D132 Cotter for Coupling on Dynamo
 D133 "Hardy" Disc for Dynamo & Magneto
 D142 Windscreen Top Bracket (Nearside)
 D143 Windscreen Top Bracket (Offside)
 D147 Wing Nut for Hood Bracket
 D155 Cap Nut for Hand Control
 D159 Dust Cap for Rear Wheel Carrier End
 D160 Dust Cap for Rear Wheel Carrier End
 D177 Rocker Cover Lid
 D178 Water Connecting Cover

D193 Starter Switch
 D196 Adjustable Pulley Body
 D197 Adjustable Pulley Flange
 D198 Locking Ring
 D199 Water Pump Spindle
 D200 Packing Gland
 D220 Shield for Ball Bearing
 D221 Pump Impeller
 D241 Instruction Plate for Oil Tray
 D244 Rocker Bracket
 D245 Tail Lamp Bracket
 D246 Petrol Level Indicator
 D259 Connecting Link - Front
 D260 Connecting Link - Rear
 D263 Spherical Seating
 D264 End Plug
 D277 Ball End (Short)
 D278 Ball End (Long)
 D283 Tappet Rod Cup (Bottom)
 D284 Tappet Rod
 D300 Rocker Spindle
 D303 Water Pump Casing
 D306 Ash Pan (Gas Producer)
 D307 Feed Valve Housing (gas producer)
 D333 Chassis Identification Plate
 D334 Clutch Outer Member
 D342 Roller Bracket (Bonnet Fastener)

D343	Locking Washer (Steering Box)	D697	Petrol Tank Strap
D352	Rear Number Plate Bracket	D805	Spring Saddle Bracket
D353	Oil Baffle (Cylinder Head)	D926	Compression Tap
D365	B/B Housing Distance Piece (Timing Chain adjuster - Timing Case)	D975	Inspection Cover for Clutch
			E
D366	Oil Retaining Disc - Timing Case	E51	Gearbox Cover
D396	Combustion Head Packing Piece	E83	Plate for Ball End - LH
D424	Starter Cable Bush	E84	Plate for Ball End - RH
D458	Front Axle	E130	Adjusting Cap (Back Axle) (Inner Rear Axle Pad)
D471	Bracket for Rocking Spindle on dashboard	E148	Pocket for Brake Rod Socket
D472	Bearing for Rocking Spindle above	E149	Pocket for Footbrake Shaft
D473	Accelerator Pedal Control Spring	E150	Spring Shackle Cover - RH
D474	Rocking on Dashboard	E151	Spring Shackle Cover - LH
D485	Dimmer Switch	E152	Fixing Strips for E150/1
D495	Control Lever - 2"	E154	End for Undershield
D508	Cross Tube for Controls	E155	Side Strip RH for Undershield
D509	Nut for Control Tube	E156	Side Strip RH for Undershield
D518	Throttle Control Lever (Steering Box)	E157	Fixing Strips Engine RH
D519	Steering Box Cap (Bottom)	E158	Fixing Strips Engine LH
D520	Bracket for Cross Tubes	E159	Fixing Strips Engine RH
D524	Front Engine Cover	E160	Fixing Strips Engine LH
D525	Grub Screw - Torque Stay Pin	E203	Swivel Axle Stop
D585	CAV Dynamo - Type NE	E206	?
D603	Fan Pulley Driver	E226	Top End Bonnet Hinge - Female
D650	Bolt - for Windscreen Channel & Bracket	E227	Top End Bonnet Hinge - Male
D651	Cylinder Head Holding Down Stud	E228	Hinge Pivot Pin - Bonnet Centre - Rear
D671	Cylinder Head Stud (long)		

E229	Radiator Stay Rod	E493	Stiffening Beam for Undershield
E270	Hand Brake ?	E508	Spring Saddle RH
E280	Head ?	E509	Spring Saddle LH
E281	Central Tube (Petrol Filter)	E510	Handbrake Dust Cover (Rear Wheels)
F282	Washer (Petrol Filter)	E511	Handbrake Drum (Rear Wheels)
E285	Cage for Gauze (Petrol Filter)	E548	Spring - Footbrake
E286	Sump (Petrol Filter)	E567	Cup for Push Rod
E361	Change Speed Hand Lever	E589	Clutch ? ?
E362	Front Wing - Nearside	E596	Torque tube
E363	Front Wing - Offside	E631	Valve Seat
E364	Rear Wings	E633	Clutch Cross Shaft
E365	Rear Wing - Nearside	E641	DOC for Sole Plate
E392	Instrument Board	E642	Fan r
E412	Steering Column Support ?	E648	Step Iron - Offside
E417	Instrument Board Stiffening Plate	E650	Relief Valve Spring
E420	Face Plate for Instrument Board	E652	Front Axle
E446	Brake Shaft Thrust Washer	E661	Clutch Coupling Disc
E157	Rear Wings - RH	E662	Clutch Coupling Distance Piece
E158	Rear Wings - LH	E666	Bracket for Klaxon Horn
E459	Front Wings - RH	E667	Klaxon Horn - Type S
E460	Front Wings - LH	E693	Exhaust Manifold Centre
E475	Ventilator	E713	Shroud for Radiator
E479	Hand Brake Lever	E750	Frame Bracket for Speedometer Spring
E485	Battery Box - Type M75	E752	Air delivery Pipe (Offside)
E490	Stiffening Beam for Undershield	E756	Fan
E491	Stiffening Beam for Undershield	E758	Cover for Tyre Pump
E492	Stiffening Beam for Undershield	E759	Connecting Plug (Frame)

E761	Stiffening Beam for Torque Stay	E999	Box Spanner ($\frac{1}{4}$ " x $\frac{3}{16}$ " Whit. hex.)
E762	Spanner for Water Pump Gland		H
E789	Fan D Type	H30	Footbrake Camshaft
E815	Front Wing - Offside	H31	Footbrake Camshaft Lever
E816	Front Wing - Nearside	H38	Handbrake Camshaft Lever
E850	Petrol Tank - Backing Piece	H39	Handbrake Camshaft R.H.
E866	Steering Box	H40	Handbrake Camshaft L.H.
E868	Flywheel - D Type	H41	Starting Handle Bracket (on frame)
E869	CAV Starter Strap	H43	Pin (self starter strap anchorage)
E872	Footbrake Lever Shaft	H54	Brake Shaft Lever
E873	Handbrake Lever Shaft	H60	Bottom Water Fitting
E890	Exhaust Pipe - Engine to Silencer	H61	Radiator Stay Rod Bracket
E891	Exhaust Pipe - From Silencer	H62	Radiator Filler
E ?	Flywheel	H63	Filler Cap
E908	Gearbox Packing Washer - Front	H64	Top for Filler Cap
E909	Gearbox Packing Washer - Rear	H70	1 st Reduction Pinion
E912	Hand Brake Lever	H72	Clutch Cross Shaft
E933	Rear Springs (Landaulette)	H73	Radiator Filter Collar
E938	Clutch Coupling Bolt	H74	Radiator Filter Bottom
E939	Clutch Coupling Disc Distance Piece	H75	Radiator Filter Gauze
E944	Flywheel - E Type	H92	B/B Cage Steering Column Support
E947	Dust Cover on sliding Gear Shaft	H93	Gap for B/B cage
E948	Dust Cover on 1 st Reduction Pinion	H94	Radiator Stay Rod
E951	Stepboard Valance (Nearside)	H98	Steering Column Support B/B
E996	Box Spanner ($\frac{7}{8}$ " x $\frac{9}{16}$ " Whit. hex.)	H103	? on Layshaft
E997	Box Spanner ($\frac{1}{2}$ " x $\frac{7}{16}$ " Whit. hex.)	H104	1 st Reduction Wheel on Layshaft
E998	Box Spanner ($\frac{3}{8}$ " x $\frac{5}{16}$ " Whit. hex.)	H112	Stud for Sub-frame Suspension Bracket

H113	Distance Piece (for rear spring bracket)	H218	Brake Rod
H126	Main Bearing (short)	H227	?-- Tank Piece
H131	Hinge Channel	H233	Change Speed Shaft
H132	? Bonnet Hinge	H234	Change Speed Box Wedge
H133	Top Rod for Bonnet Hinge	H235	Change Speed Shaft Tube
H134	Bonnet Hinge Pin	H244	Clutch Spring
H136	Bonnet Side Hinge	H245	Change Speed Box Wedge
H145	Bush for Diff. Cage	H256	Petrol Tank Support Cap
H146	Planet Pinion Washer	H257	Petrol Tank Support
H154	? Driving Flange	H269	Carburettor Sliding Tube
H155	Stuffing Box	H293	Petrol Tank (capacity 11 gallons)
H156	Stuffing Box Gland	H294	Petrol Feed Pipe
H163	Rear Hub Driving Doc	H306	Air Relief Valve Seat
H164	Driving Dog Pegs	H327	Handbrake Lever Shaft
H172	Rear Spring Plate	H336	Silencer Tube
H173	Rear Spring Bolt	H338	Silencer Outer Shell
H176	Bevel Pinion B/B Cage	H340	Exhaust Pipe Stay
H178	Thrust Washer	H347	Exhaust Pipe - Engine to Silencer
H181	CAV Lighting Switchboard	H348	Exhaust Pipe from Silencer
H183	Instrument Board Lighter	H357	? Spring Centre Bolt
H188	G-- Rear Body Panel Guard	H358	? Spring Centre Bolt
H197	Hood Iron Sleeve	H370	Frame Plate Front
H198	Hood Pivot Pin	H371	Frame Plate Rear
H199	Rear Spring Packing Piece	H402	Universal Joint Dust Cover
H200	Rear Spring Packing Piece	H412	Strap for Battery Box
H203	Front Spring (offside)	H413	Bracket for Self Starter Foot Switch
H204	Rear Spring	H415	Top End Bonnet Hinge (Female)

H416	Top Bonnet Hinge	H610	Felt Packing for Radiator
H420	Control Rod	H636	Air Pressure Gauge
H434	Oil and Air Pressure Gauge Flange	H637	Horn Switch and Connections
H438	Strap End	H643	Lead Hammer
H446	Water Heater Outlet Pipe	H652	Top Bracket for Wheel Carrier Support
H462	Hand Air Pump Pipe	H653	Bottom Bracket for Wheel Carrier Support
H471	Air Gauge Pipe	H654	Screwed End for Wheel Carrier Tube
H472	Oil Gauge Pipe	H658	Oil Pressure Gauge
H474	Lighting Wire Bush	H659	Radiator Badge
H479	Luggage Carrier - Front Half Lt. Hd.	H661	Screwed End for Wheel Carrier Tube
H482	Dashboard Support - Lt. Hd.	H664	U Bolt
H483	Dashboard Support - Rt. Hd.	H665	Packing Piece for Spare Wheel Carrier
H487	Cable Clip	H675	Wheel Stop
H488	Cable Clip	H678	Locking Ring for Spare Wheel Carrier
H516	Luggage Carrier - Rear Half	H679	Locking Nut for Spare Wheel Carrier
H536	Silencer Supporting Saddle	H693	Speedometer Pulley (on universal joint casing)
H554	Clutch Peal Lever	H698	Saddle Piece
H556	Speedometer Bracket (Frame)	H699	Saddle Piece
H577	Starting Handle Bracket	H704	Packing Plate for Shock Absorber
H581	Dynamo Table	H718	Cap for Exhaust Pipe Stay
H583	Bracket for Foot Switch	H731	Differential Sun Bevel Wheel
H586	Packing Piece for Cross Tube	H732	Lock nut for Sun Bevel Wheel
H587	Packing Piece for Cross Tube	H744	Differential Cage (Spigot)
H592	Lamp Bracket - LH	H757	Stiffening Plate for Wing Stays
H593	Lamp Bracket - RH	H758	Plate for Ball End L.H.
H596	Luggage Carrier - Rear Half	H768	1 st Reduction Pinion Flange
H597	Luggage Carrier - Front Half Rt. Hd.	H787	Reverse Gate Stop Rod

H799 Torque Suspension Fork Stop
 H850 Spring Washer
 H851 Dynamo Pulley
 H855 Instrument Board
 H856 Hanger for Front No. Plate
 H857 Hanger for Back No. Plate
 H860 Change Speed Hand Lever
 H861 1st Reduction Pinion Flange
 H893 Top Joint
 H895 Steering Column Support Distance Piece
 H899 Hood Bracket
 H934 Magneto Switch
 H950 Propeller Shaft
 H951 Thrust Ring - Inner (Steering Box)
 H973 Control Spring Bracket

L

L38 Steering Worm Packing Washer
 L39 Steering Worm Wheel Packing Washer
 L46 ?
 L65 Brake Camshaft Washer
 L84 Main Bearing Cap
 L88 Gearbox Packing Gland Back
 L89 Gearbox Packing Gland Front
 L90 Back Axle Packing Gland
 L96 Eccentric Strap
 L132 Terminal for Low Tension Wire
 L154 Oil Tell Tale Guide

L212 Packing Washer
 L213 Packing Washer Also D344/5/6
 L214 Packing Washer
 L241 Collar Stud
 L258 Clutch - Outer Member
 L350 Packing Washer for Spring Horn
 L351 Packing Washer for Spring Horn
 L352 Packing Washer for Spring Horn
 L353 Packing Washer for Spring Horn
 L365 Universal Star Joint Pin
 L371 Camshaft Back Bearing Feed Pipe
 L387 Washer for Y 10
 L400 Universal Joint Cover
 L404 Oil Regulator
 L406 Spanner for Clutch Locking Ring
 L417 Tie Bar
 L418 Chassis Diagram Instruction Plate
 L428 Timing Chain Oiler
 L429 3/8" Gas Plug
 L557 Clutch Instruction Plate
 L840 Magneto Table
 L846 Pin for Bonnet Fastener Handle
 L847 Leather for Footbrake Operating Lever
 L849 Pin for Connecting Link
 L850 Badge ?
 L886 Pin for Socket Footbrake
 L892 Pin for Propeller Shaft

L892 Pin for Propeller Shaft
 L894 Main Bearing Cap (Centre)
 L959 Crankcase Door Front
 L991 End for Carb: Sliding Tube
M
 M118 Attachment Plate for N° 3 Hood Stick
 M398 Stop Collar (Valve)
 M402 Float Chamber
 M423 1st Reduction Pinion Flange
 M424 Clutch Coupling Flange
 M696 Stud for Rocker Spindle
 M827 Hood Iron Bracket N.S.
 M877 Shock Absorber Ball End Front
 M896 Side Steering Tube
 M900 Roller for Accelerator Pedal Lever
 M901 Pin for M900
 M982 Clutch Shaft
 M983 Dynamo Pulley

N

N61 Foot Brake Camshaft Lever
 N69 Footbrake Camshaft
 N83 Main Bearing Cap
 N84 Main Bearing Cap
 N89 Clutch Fork
 N90 ? for Clutch Fork
 N91 Plunger Spring
 N92 Main Bearing Bolt

N101 ? Spring ?
 N102 Gearbox Plunger Spring
 N103 Reverse Stop Spring
 N105 Spring for Bonnet Fastener - Rear
 N106 Spring for Bonnet Fastener - Front
 N107 Air Pump Inlet & Relief Valve Spring
 N108 Air Pump Delivery Valve Spring
 N109 Foot Brake Block Supp Pin
 N119 Camshaft Front Bearing
 N140 Petrol Filter
 N145 Driving Flange Plate
 N146 Driving Flange Plate
 N165 Rivet for Driving Flange Plate
 N172 Bottom Water Pipe
 N195 Universal Joint Instruction Plate
 N701 Gearbox Direction Plate
 N703 Throttle Control Direction Plate
 N704 Ignition Control Direction Plate
 N705 Retard Control Direction Plate
 N706 Shut Control Direction Plate
 N707 Extra Air Direction Plate
 N708 Open Control Direction Plate
 N709 Advance Control Direction Plate
 N711 Foot Brake Drum Liner
 N720 Oil Level Indicator
 N721 Oil Level Index
 N735 Petrol Tank Bracket

N737 Petrol Filler Washer
 N740 Magneto Table
 N749 Foot Brake Drum
 N750 Magneto Ball End
 N806 Bonnet Hinge Pin Plate
 N861 Footbrake Block Spring
 N906 Crankshaft Starting Dog
 N907 Starting Dog Pin
 N910 Nut for Sun Wheel
 N911 Nut for Back Axle Shaft
 N912 Pin for Thrust Washer
 N918 Nut for Bevel Pinion
 N942 Footbrake Block Hook
 N979/82 Balance Weight for Clutch

P

P6 Pin for Air Pump Con Rod
 P18 Side Steering Arm
 P183 Air Pump Con. Rod
 P219 Washer for Plug
 P236 Rear Spring Horn (offside)
 P237 Rear Spring Horn (nearside)
 P284 Joint for Gearbox
 P291 Front Axle
 P305 Side Steering Arm
 P319 Side Steering Tube & Tie Bar End

P344 Crankshaft Thrust Washer
 P346 Main Bearing (short)
 P451 Gearbox Packing Washer
 P516 Clutch Keep Ring
 P517 Plate Presser
 P524 1st Speed Wheel on Layshaft
 P527 3rd & 4th Speed Striking Fork
 P528 1st ? & 2nd ? Speed Striking Fork
 P529 Reverse Striking Fork
 P542 Rear Spring Front Bracket (offside)
 P543 Rear Spring Front Bracket (nearside)
 P552 Change Speed Gate
 P562 Cap Nut
 P584 Brake Shoe Liner
 P596 Rear End Eye Piece for Propeller Shaft
 P600 Driving Flange Cover
 P601 U Washer for P600
 P676 Oil Float
 P677 Float Lever
 P678 Pivot for Float Lever
 P679 Pivot Pin for Float Lever
 P680 Balance Weight
 P681 Oil level Indicator Rod
 P691 Crankcase Door (back)
 P694 Gearbox Striking Lever
 P799 Oil Filler
 P818 1st & 2nd Speed Wheel on Mainshaft

P826 Drain Plug 3/4" Cas.
 P867 Clutch Disc - Outer
 P868 Clutch Disc - Inner
 P870 Layshaft
 P871 Layshaft Distance Piece
 P872 Layshaft Distance Piece
 P969 Oil Filter Tray
 P971 Trunnion Block

Q
 Q118 Layshaft Nut
 Q284 Hub Extractor
 Q295 Bonnet Fastener Stud - Rear
 Q296 Nut for Rear Fastener Stud
 Q309 Spring Link Bush
 Q312 Back Spring Link
 Q366 Rear Spring Tie-Bar
 Q379 Lubricator Cap
 Q405 Lubricator Cap Spring
 Q431 Spring Bolt
 Q432 Spring Bolt
 Q726 Distance Piece for Steering Column Support
 Q961 Gearbox Stuffing Box
 Q962 Gearbox Stuffing Box Nut
 Q963 Gearbox Stuffing Box Gland
 Q964 Rear Spring Tie Bar

R

R28 Crankshaft Plug

R41 Grip Support
 R111 Back Axle Oil Filler
 R304 Cap Nut
 R305 Locking Nut
 R360 Clutch Shaft Bracket - R.H.
 R459 Washer
 R505 Stuffing Box
 R506 Stuffing Box Gland
 R525 Washer for Rear Hub
 R774 Starting Handle Dog
 R822 Tail Lamp Bracket
 R878 Spring Bush
 R991 Spring Plate Bush

U
 U78 Half Time Wheel Centre Piece
 U204 Tappet Dog
 U253 Oil Filler Cap
 U254 Wing Nut
 U281 ?
 U418 Change Speed Shaft Bracket
 U419 Cap for U418
 U420 Change Speed Shaft Bush
 U424 Cage for Change Speed Shaft Bush
 U488 Ball End for Control Levers
 U516 Control Lever - 2 3/4 "
 U536 Silencer supporting Saddle
 U613 Valve Cap Spanner

U625 Control Ball Socket
 U626 Cap for Control Ball Socket
 U628 Bonnet Fastener Handle
 U721 Clutch Shaft Packing Washer ?
 U809 Push Rod Roller
 U845 Petrol Pipe Bracket
 U847 Petrol Tank Hanger
 U913 Hub Extractor Screw
 U953 Magneto Adjusting Plate
 V
 V22 Footbrake Operating Lever
 V90 Silencer - Outer Shell
 V168 Grub Screw for W446
 V199 Bonnet fastener Connecting Link
 V203 Stop Plate Washer
 V284 Clutch Brake
 V285 Clutch Brake Locking Ring
 V292 Cover for Rear Hub
 V298 Water Connecting Cover
 V379 Bracket ? for Hand Controls
 V430 Air Relief Valve
 V444 Front End Eye Piece for Propeller Shaft
 V446 Plug for Ignition Tube
 V447 Plug for Carburettor Tube
 V487 Planet Pinion
 V488 Planet Pinion Bush
 V567 Eye Piece for H94

V576 Cylinder Block to Crankcase Joint
 V713 Plunger for Oil regulator
 V971 ?
 V1001 Front Spring Horn - ?
 V1002 Front Spring Horn - ?
 V1003 Front Spring Link
 V1004 Front Spring Frame Bracket
 V1006 Control Ring
 V1023 Cable Guide & Cap
 V1051 ? Washer
 V1094 Sun Bevel Wheel
 V1095 Planet Pinion
 V1113 Spring Saddle - R.H.
 V1114 Spring Saddle - L.H.
 V1135 Brake Shoe Pin
 V1136 Bevel Pinion Casing Bolt
 V1137 Silencer End Plate
 V1138 Silencer Tube End
 V1145 Silencer Tube
 V1148 Torque Stay Segment
 V1149 Rear Hub Distnce Piece
 V1157 Torque Stay Suspension Bracket & Cap
 V1159 Torque Stay
 V1170 Cover Plate
 V1188 Steering Box Support Distance Piece
 V1274 Flange for Clutch Springs
 V1376 Oil Level Indicator Knob

V1378	? Breather in Crankcase	V1652	Shock Absorber Pin
V1507	Oil Delivery Pipe for Rockers	V1653	Rear Shock Absorber Frame Plate
V1520	Tappet Dog	V1657	Securing Bracket
V1527	Induction Manifold	V1666	Handbrake Drum
V1534	Footbrake Lever Shaft	V1669	Shock Absorber Bracket
V1542	? ? Bush	V1670	Brake Rod (rear)
V1544	Differential Casing (socket) L.H.	V1680	Deckboard L.H. (Nearside)
V1545	Differential Casing (spigot)	V1681	Deckboard R.H. (offside)
V1562	Steering Box	V1691	Seating for Petrol Level Indicator
V1563	Steering box Bracket	V1711	Exhaust pipe from Silencer
V1564	Cap for Steering Box Bracket	V1712	Exhaust Pipe from Engine to Silencer
V1565	Dashboard	V1714	Exhaust Pipe Stay
V1572	Back Axle Tube	V1728	Driving Pin
V1583	Brake Shoe - R.H.	V1732	Zenith Carburetter - Type 48 RA
V1584	Brake Shoe - L.H.	V1737	Throttle Control Rod on Carb.
V1585	Back Axle Tube Clip	V1738	Sliding Tube on Carburetter
V1599	Top Water Fitting	V1741	Ignition Control Rod from Rocking Spindle to Cross Tube
V1612	Oil Pump Delivery Pipe	V1742	Throttle Control Rod from Dashboard to Carburetter Control Rod
V1613	Oil Pump Suction Pipe	V1744	Control Rod
V1614	Union Body	V1745	Cross Tube for Controls
V1615	Air Pump Connecting Rod	V1746	Throttle Cross Tube
V1616	Oil Pump Eccentric	V1747	Ignition Cross Tube
V1618	Oil Pump Body	V1748	Instrument Board
V1619	3 Way Connection	V1749	Face Plate for Instrument Board
V1636	Oil Pipe for Rear Camshaft Bush	V1786	Gauze for Oil Filler Cap
V1640	Cover for Heat Regulator Body		
V1651	Shock Absorber Pin		

V1835	Hub Extractor	V2150	Operating Lever
V1923	Front Wing Stay (offside)	V2151	Bracket for Operating Lever
V1968	Drain Tap	V2153	Pull Rod Spring
V1980	Cap for Oil Regulator	V2154	Brake Shoe Spring
V1988	Obtuse Angle Plate for Screen	V2163	Roller Bearing - Retaining Nut
V1989	Right Angle Plate for Screen	V2164	Collar for Brake Shoe Bolt
V1996	Tappet Guide	V2165	Pivot Pin
V1997	Bush for Tappet Guide	V2166	Brake Shoe Bolt
V1998	Tappet Rod	V2180	Brake Shoe Roller
V1999	Cup for Tappet Rod	V2181	Brake Shoe Pin
V2000	Camshaft Bush (front)	V2182	Operating Wedge
V2001	Camshaft Bush (centre)	V2183	Nut for Pull Rod
V2010	Stop for Oil Regulator	V2193	Centre ? ?
V2017	Instrument Board Supporting Bracket R.H.	V2194	Cable Adjusting Clip
V2018	Instrument Board Supporting Bracket L.H.	V2219	Arch for Well of Body
V2019	Chassis Instruction Plate	V2220	Compensating Gear Casing
V2057	Bulb Horn (double twist) D touring	V2221	Cover for Compensating Gear Casing
V2058	Bulb Horn (double twist) D landaulette	V2257	Cable Pulley
V2126	Bulb Horn (double twist) E type	V2257	Brake Pedal Lever
V2116	?Front Wing & Stay	V2259	Compensating Shaft
V2127	Brake Shoe - Front	V2260	Plate for Compensating Shaft
V2128	Brake Shoe - Front	V2267	Tappet Guide
V2129	Number Plate Clip	V2272	Oil Filler Cap
V2130	Number Plate Clip	V2273	Steering Wheel (18" dia)
		V2295	Jaw for Operating Lever (kidney box)
		V2296	Anchor for Cable Casing
		V2307	Adjusting Nut for Pull Rod

V2308	Pawl for Pull Rod	V2902	Connecting Rod & Cap (Rod)
V2310	H.T. Wire Pad	V2903	Connecting Rod & Cap (Cap)
V2311	Ring for H.T. Wires	V2911	Front Spring - Offside OE
V2320	Swivel Steering Arm	V2912	Front Spring - Nearside OE
V2321	Ball for Swivel Steering Arm	V2914	Front Axle
V2322	Pin for Swivel Steering Arm	V2915	Autovac
V2323	Side Steering Tube End	V2918	Rear Hub - nearside
V2324	Distance Piece for Steering Tube End	V2919	Rear Hub - offside
V2325	Distance Piece for Swivel Steering Arm	V2922	Front Spring Bush
V2327	Joiner for Cover Plate	V2923	Front Hub (nearside - RH)
V2349	Cap for Engine Supporting Bracket (front)	V2924	Front Hub (offside - LH)
V2355	Planet Pinion Spindle	V2925	Instrument Board OE type
V2569	Dust Cover for Front Brake (offside)	V2926	Face Plate for Instrument Board
V2570	Dust Cover for Front Brake (nearside)	V2929	Speedometer (JAEGER)
V2571	Dust Cover for Front Brake (offside)	V2932	Spiral Toothed Bevel Wheel ¹⁵ / ₅₀
V2676	Battery Box Strap	V2933	Spiral Toothed Bevel Pinion ¹⁵ / ₅₀
V2678	Speedometer Pulley (100 ^M / _M) JAEGER	V2938	Footbrake Lever
V2769	Bracket for Speedometer Pulley JAEGER	V2939	Brake Lever on Compensating Shaft
V2814	Tool Box	V2940	Hub Cap 62 RW
V2815	Tool Box Strap (inner)	V2941	Retaining Plate
V2820	Tool Box Tray	V2942	Jaw for Operating Lever
V2850	Wedge for Cable	V2943	Oilless Bush for Jaw
V2883	Stop for Bonnet	V2964	Spare Wheel Carrier Tube
V2884	Speedometer Pulley 71 ^M / _M (JAEGER)	V2964	Tail Lamp Bracket
V2885	Speedometer Pulley 62 ^M / _M (JAEGER)	V2968	Front Brake Rod
V2888	Speedometer Pulley 84 ^M / _M (JAEGER)	V2969	Guide for Front Brake Rod
V2991	Front Brake Rod	V2981	Knuckle Cover

V2982	Locking Rings (as shown offside)	V3438	Check Plate
V2983	Locking Rings (as shown nearside)	V3468	Cap for Oil Pump Cover
V2990	Cylinder Head Packing Piece	V3476	Petrol Tank ?? Seating
		V3571	??
V3023	Worm Wheel Bolt	V3572	Table for Dynamo & Magneto Cradle
V3029	Reverse Gate Stop	V3574	Control Spindle for Eccentric
V3047	Handle for Compression Cock	V3575	Spindle for Eccentric (long)
V3057	Supporting Bracket	V3576	Eccentric
V3064	"Berkeley" Seat Fitting	V3577	Eccentric and Control Arm
V3065	Adjusting Plate	V3578	Magneto Strap (inner)
V3075	Tool Box	V3579	Magneto Strap (outer)
V3078	Bolt for Wing Fixing Plate	V3580	Saddle Piece (Dynamo Strap)
V3110	Tappet Rod	V3581	Saddle Piece (Dynamo Strap)
V32??	Fire Wall ?	V3582	Dynamo Strip (Inner)
V3253	"Fisher & Ludlow" Spare Wheel Dish	V3583	Dynamo Strip (Outer)
V3261	Roller for Accelerator Pedal Lever	V3588	Bracket for Sparton Horn
V3332	Sparton Horn Switch	V3598	Face Plate for Instrument Board
V3339	Slam Plate	V3599	Instrument Board
V3340	Slam Plate	V3612	Petrol Level Indicator (Smiths)
V3357	Shock Absorber Bracket - Rear (Hartford)	V3662	Saddle Piece for Magneto Strap
V3358	Shock Absorber Bracket - Rear	V3663	Saddle Piece for Magneto Strap
V3359	Shock Absorber Pin	V3664	Pin for Coupling
V3366	Lubricator (Tecalemit)	V3665	Spindle for Eccentric (short)
V3412	Cylinder Head Joint	V3666	Spindle for Dynamo Drive
V3415	Brake Shoe - Rear L.H.	V3667	Coupling Flange
V3416	Brake Shoe - Rear R.H.	V3668	Adjusting Cap (back)
V3422	?? -cator	V3675	Ball Bearing Housing for Hand Control

V3679	Bracket for Hand Control	V4412	Distance Piece for Quadrant (Hand Brake)
V3698	Dashboard	V4416	Cap Nut for Oil Filler
V3702	Eccentric	V4417	Handle for Cap Nut
V3707	Air Vent Plug - Fuel Tank	V4448	Front Wing (Nearside)
V3765	Petrol Tank Strap (offside)	V4419	Front Wing (Offside)
V3799	Body Plate (front)	V4450	Rear Wing (Offside)
V3800	Handle for Tappet Adjustment Spanner	V4466	Cap for Steering Box Bracket
V3845	Offside Door Handle (front)	V4479	Rear Wing (Nearside)
V3846	Door Handle	V4503	Deckboard L.H. Nearside OE Type
V3849	Inside Door Handle	V4504	Deckboard R.H. Offside OE Type
V3850	Outside Escutcheon	V4517	Catch Plate for Hammer
V3968	??	V4518	Set Screw for Catch Plate
V3988	Front Brake Strip	V4540	Rear Wing Stay
V3989	Brake Strip Guide	V4541	Rear Wing Bracket
V4003	Socket for Hub Extractor	V4542	Locking Rings - Offside
V4049	Bevel Pinion Casing	V4543	Locking Rings - Nearside
V4062	Cape Hood Rest	V4565	Flywheel
V4083	Magneto Spindle	V4584	Cover for Operating Lever - Nearside
V4084	Magneto Adjusting Cap (back)	V4585	Cover for Operating Lever - Offside
V4136	Locking Washer	V4588	Wheel Stop
V4139	Magneto Control Lever	V4589	Clamp Plate
V4145	Eccentric (keyed)	V4603	Spare Wheel Carrier Arm
V4224	1 st Reduction Pinion	V4645	Step Iron
V4257	Set Screw for Engine Supporting Bracket	V4672	Bracket for Lead Hammer
V4357	Petrol Pipe for Carburetter	V4673	Socket for Hub Extractor
V4393	Change Speed Box	V4728	Valve Spring
		V4732	Petrol Tank Filler Seating

V4733	Petrol Tank Filler Cap	V5408	? Washer for Valve Spring
V4734	Baffle Plate for Filler Cap	V5504	Pedal Plate
V4763	Spare Wheel Carrier Arm (Offside)	V5592	Locking Washer
V4764	Spare Wheel Carrier Arm (Nearside)	V5640	Stuffing Box
V4774	Locking Wheel - Gear Box Lid	V5641	Stuffing Box Gland
V4775	??	V5643	Speedometer Pulley (on univ. joint casing)
V4785	Head Lamp -CAV Type E.V.	V5661	Petrol Tank OE Type
V4874	Differential Casing (Socket) L.H.	V5662	Petrol Tank Filler Seating
V4785	Differential Casing (Spigot)	V5669	Petrol Level Indicator ??
V4940	Connecting Rod & Cap - Rod	V5700	Dovetail (male)
V4941	Connecting Rod & Cap - Cap	V5701	Dovetail (female)
		V5953	"Klaxon" Horn (combination)
V5195	Front Wheel Brake Cable Casing		
V5305	Side Steering Arm	V6043	Door Plate "VAUXHALL MOTORS LTD"
V5331	Connecting Rod & Cap - Rod	V6065	Bevel Pinion Casing
V5332	Connecting Rod & Cap - Cap	V6433	??
V5349	Battery Box Strap	V6480	Radiator Filler
V5396	Main Bearing Cap (Front)	V6481	Filler Cap
V5397	Main Bearing Cap (Back)	V6585	??
V5398	Main Bearing Cap (Centre)	V6640	Patentee's Plate
V5399	Main Bearing Cap (Short)	V6677	?? Water Fitting
V5400	Inlet Valve	V6678	Dashboard OE
V5401	Exhaust Valve	V6679	Bonnet Landing
V5404	Valve Guide	V6689	Face Plate for Instrument Board
V5405	Valve Guide	V6690	Instrument Board
V5406	Cap for Valve End		
V5407	? Washer for Valve Spring	V7115	Undershield Main Belly Piece

V7116 Side Piece L.H. (front)
 V7119 Side Piece RH (rear)
 V7198 Rear Wing (offside)
 V7199 Rear Wing (nearside)
 V72?? Instrument Board OE Type
 V7442 Support for Head Lamp Brackets
 V7660 Front Wing & Spare Wheel Tray (offside)
 V7661 Front Wing & Spare Wheel Tray (nearside)
 V7812 Cover for ??
 V7718 Dynamo (C.A.V.) TYPE D.B. (E.S.I.R.)
 V9151 Sub Frame Member (nearside)
 V9152 Sub Frame Member (offside)

W

W25 Bolt
 W26 Control Tube Bush
 W28 Control Tube Bush
 W163 Torque Stay Ball End
 W209 Steering Box Cover
 W210 Steering Box Cap (top)
 W212 Steering Worm Wheel
 W214 Worm Wheel Shaft
 W244 Eye Bolt
 W245 Eye Bolt Nut
 W258 Steering Column Coupling
 W347 Sub-Frame Suspension Bracket
 W350 Steering Worm Nut
 W379 Clutch Brake Pad

W392 Layshaft Distance Piece
 W402 Reverse Pinion Bush
 W406 Spring Plate
 W407 Stop Plate
 W408 Locking Plunger
 W415 Striking Lever Cover
 W416 Locking Bar
 W417 Ball Bearing Cage
 W420 Layshaft Dust Cap
 W424 Distance Piece for 1st Reduction Pinion
 W426 Stud for Locking Bar
 W429 Reverse Pinion Shaft
 W440 Clutch Disc Retaining Plate
 W442 Air Pump Piston
 W443 Air Pump Barrel
 W446 Gudgeon Pin
 W447 Air Inlet Valve Seat
 W448 Adjusting Screw
 W452 Wing Nut
 W489 Foot Brake Adjusting Screw
 W490 Socket for Ball Joint
 W491 Socket Plug (short)
 W492 Socket Plug (long)
 W493 Pin for Foot Brake Adj: Screw
 W495 Ball End (Footbrake Camshaft Lever)
 W530 Nut for Ball Handle
 W533 Ball handle

W539 Pawl Rod
 W541 Change Speed Box Cover
 W557 Ball handle Support
 W558 Reverse Gate Stop
 W563 Air Inlet Filter
 W630 Gearbox Cover
 W735 Roller Bearing Eccentric Ring
 W736 Locking Washer
 W791 Steering Worm
 W803 Brake Quadrant
 W806 Clutch Withdrawal Ring
 W807 Bush for Clutch Withdrawal Ring
 W896 Fixed Wheel
 W939 Gearbox Bolt
 W951 Ball Bearing Adjusting Washer
 X
 X4 Petrol Tank Filler Cap
 X5 Petrol Tank Filler Seating
 X6 Petrol Tank Filter
 X232 Brake Shaft Lever (Hand)
 X333 Ball for Steering Tube
 X334 Ball Socket (long)
 X335 Ball Socket (short)
 X336 Washer for Ball
 X619 Sub-Frame Suspension Bracket
 X620 Cap for Sub-Frame Suspension Bracket

X672 Ring for Clutch Plate Presser
 X673 Nut for Clutch Shaft
 Y
 Y10 Cap for Oil Filler
 Y451 Drain Cap - Sump
 Y453 Oil Strainer
 Y622 Bush for 1st Reduction Pinion
 Y643 Coupling for Brake Rod
 Y644 Jaw - Brake Rod
 Y664 Pin for Univ^{sl}. Star Joint
 Y665 Universal Star Joint
 Y998 Suction Valve Seating

Total 1028